

Miata License Plate Relocation Installation Instructions


For 1990-2005 Mazda Miata

PART #904-530




Tools required: a jack, jack stands, wheel chalks, 6mm and 5/32 Allen wrenches, scissors, 14mm combination wrench, 17mm combination wrench and socket

 - 1. Chalk the rear wheels. Jack the front of the vehicle up and place it on jack stands. Do not work on the vehicle while it is on the jack.
- 2. Use a 14mm combination wrench to remove the three bolts securing the passenger side front tow hook to the vehicle. Do not remove the tow hook. Illustration 2.

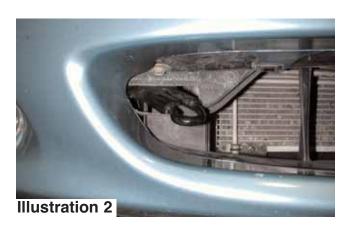









License Plate Relocation Installation Instructions

3. Slide the license plate relocation bracket in between the tow hook and the body. Install the factory hardware through the tow hook and the license plate relocation bracket finger tight. You will notice the bracket can pivot slightly on the bolts. This is so you can align the license plate with the bumper cover. We have provided three M10 flange bolts in case your tow hooks have been removed. Illustration3.





4. If you have a '90-'97 Miata skip to step 5. For '99-'05 Miata, gather the longer of the M10 bolts, the spacer, the M10 lock nut and the license plate bracket. The bottom of the license plate bracket is the straight edge. The back of the bracket is the side with the weld nuts. Slide the M10 bolt through the plate bracket, the spacer and then the relocation bracket. Start the lock nut. The plate bracket can be fastened to the relocation bracket in several different ways using different hole combinations. Choose a combination of holes which does not allow

the license plate or plate bracket to come in contact with the bumper cover. Tighten the bolt with a 17mm socket and combination wrench. Illustration 4.

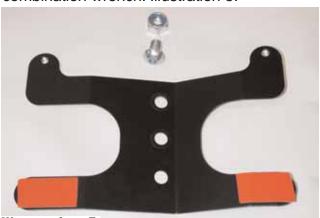


Illustration 4





5. For '90-'97 Miata, gather the button head M10 bolt, the M10 lock nut and the license plate bracket. The bottom of the license plate bracket is the straight edge. The back of the bracket is the side with the weld nuts. Slip the Button head bolt through the license plate bracket, the relocation bracket and start the nut. The plate bracket can be fastened to the relocation bracket in several different ways using different hole combinations. Choose a combination of holes which does not allow the license plate or plate bracket to come in contact with the bumper cover. Tighten the bolt with a 6mm Allen wrench and a 17mm combination wrench. Illustration 5.







6. Two sided tape is provided if your license plate frame does not accommodate bolts in the bottom. Cut the tape in half with scissors and attach it to the plate bracket. Use the 1/4" fine thread bolts to secure the license plate to the license plate bracket. Illustration 6.





7. Adjust the license plate so that it is parallel to the bumper cover. Tighten the three tow hook/relocation bracket bolts to 36 ft-lbs.

Enjoy your License Plate Relocation Kit!