



# Stylebar Windblocker Installation Instructions For Miata w/Moss StyleBar 903-300

PART # 904-165

440 Rutherford St. P.O. Box 847 Goleta, CA 93117  
1-800-667-7872 • FAX 805-692-2525 • www.miatamania.com


Tools required for install using straps: None.

Tools required for install using screw-studs: Phillips screwdriver, permanent marker or Sharpie, Center Punch, #29 (0.1360") drill bit, drill, 8-32 thread tap & soft towel.

Instructions for installation using straps:

1. Starting with the lower right strap, wrap the strap around the bar and over the windblocker.
2. Press the male and female snaps together until you hear an audible "snap" sound.

3. Repeat twice moving up the right side. Then continue by starting with the lower left side snaps and moving up. See the picture below for an illustration of the order in which to snap the fasteners.
4. Removal is the opposite of installation.

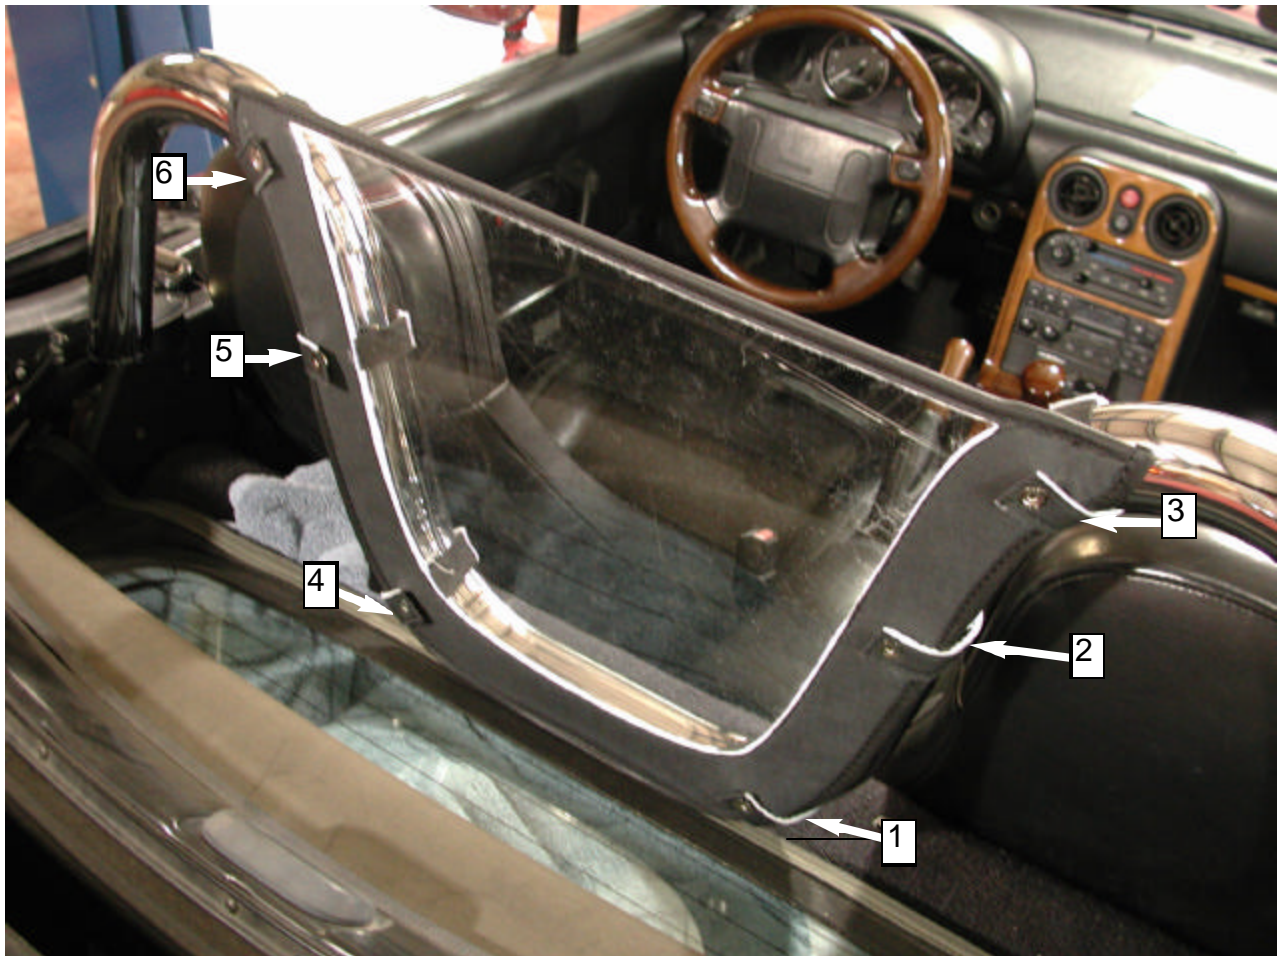

# Miata Stylebar Windblocker Instructions

Instructions for one-time installation using screw-in snaps:

1. The Moss Miata Stylebar Windblocker can optionally be installed with screw-in snaps for quicker installation and removal. The first step for this type of installation is the removal of the stylebar from the car.
2. Lay the Stylebar down on a soft towel.
3. Lay the windblocker over the Stylebar, centered in place, in the intended mounting position with the snaps on the Windblocker facing the bar. See the picture below and on the following page to see how the Stylebar will mount to the bar.
4. Hold the Stylebar Windblocker in place while lifting the lower left corner (snap #1 on picture below). Mark the hole location for the screw-in snap with a permanent marker (i.e. Sharpie).
5. Take the Windblocker off of the Stylebar. Centerpunch the hole location. Drill the hole using a #29 (0.1360") drill bit.
6. Use the 8-32 thread tap to tap the hole. Then use a screwdriver to install the screw-in snap into the hole.
7. Snap the Windblocker to the Stylebar using the newly installed snap.
8. Realign the Windblocker for the lower right hole location (marked #2 on picture below).

9. Pull slight tension on the Windblocker to the right and mark the lower right hole location with the permanent marker. This tension is to avoid slack and flapping in the Windblocker.
10. Centerpunch and drill the lower right hole location. Install the screw-in snap. Snap the Windblocker to the Stylebar using the two screw-in snaps that are now installed in the Stylebar.
11. Go to the left center snap location (marked #3 on the picture below) and pull slight tension upward as well as outward. Mark centerpunch and drill that hole location. Snap Windblocker to the bar using the three snaps now installed onto the Stylebar.
12. Repeat Step 11 at the right center snap location (#4), the upper left snap location (#5), and the upper right snap location (#6).
13. Reinstall the Stylebar onto the car. When installed on the Stylebar, the Windblocker should remain behind the bar, facing away from the passenger compartment.
18. With the screw-in snaps installed, the mounting straps for the Stylebar can be cut off if desired.
20. Enjoy your new Moss Stylebar Windblocker. Visit [MiataMania.com](http://MiataMania.com) for all your Miata performance, motorsports and maintenance needs...





# Miata Stylebar Windblocker Instructions

